



Use and maintenance instructions

Bridge


Outdoor luminaire for wall installation.

TECHNICAL DETAILS: refer to the product label

 The UE declaration of conformity can be downloaded from our website www.marecoluce.it

 Insulation Class II


IP44 Protection degree against dust ingress, solid particles, moisture

 This product must not be disposed as a normal household waste

WARNINGS:

- THE SAFETY OF THIS PRODUCT IS GUARANTEED ONLY WITH THE RESPECT OF THE EXISTING RULES FOR THE ELECTRICAL SYSTEMS, AND WITH THE APPROPRIATE USE OF THESE INSTALLATION INSTRUCTIONS, THEREFORE IT IS NECESSARY TO KEEP THEM.
- THE IMPROPER USE OF THIS PRODUCT IS FORBIDDEN; ANY TAMPERING WITH THE PRODUCT OR MODIFICATION OF THE PRODUCT THAT IS NOT AUTHORIZED BY MARECO LUCE CAN CAUSE DAMAGE TO PEOPLE, ANIMALS OR THINGS, AND WILL VOID ANY WARRANTY OR LIABILITY.
- SWITCH OFF THE ELECTRICITY BEFORE CONDUCTING ANY KIND OF MAINTENANCE.
- THE PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH BEST PRACTICE.
- DAMAGED COMPONENTS MUST BE REPLACED WITH MARECOLUCE ORIGINAL SPARE PARTS.
- DO NOT PLACE ANY OBJECT ON THE DIFFUSER AND DO NOT COVER IT.
- MAX. LAMP SIZE (IN MM):

- o FBT 8W E27 D70 L110
- o FBT 15W E27 D70 L160
- o FBT 21W E27 D85 L180

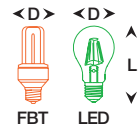

GENERAL MAINTENANCE RECOMMENDATIONS:

- CLEAN THE LUMINAIRE PERIODICALLY IN ORDER TO REMOVE DIRT DEPOSITS ON THE BASE AND THE DIFFUSER.
- CHECK PERIODICALLY AND CLEAN THE DRAINAGE HOLES IF NEEDED.
- CHECK THE TIGHTNESS OF THE SCREWS SECURING THE LUMINAIRE TO THE POLE.
- DO NOT USE HARSH DETERGENTS TO CLEAN THE DIFFUSER.
- CHECK THE TIGHTNESS OF THE SCREWS SECURING THE LUMINAIRE TO THE INSTALLATION SURFACE.
- CHECK THE INTEGRITY OF THE DIFFUSER. IN CASE OF DAMAGE, REPLACE IT BY USING AN ORIGINAL MARECO LUCE DIFFUSER.
- CHECK THE PLASTIC CASINGS CAREFULLY IN ORDER TO IDENTIFY ANY POSSIBLE INSULATION DAMAGE.

INSTALLATION INSTRUCTIONS:

1. Remove the diffuser (1) by turning it 60° anti clock-wise.
2. For upright installation – drill a drainage hole in the bracket (2) in correspondance with the pre-drilled hole (Pict. A). For downward installation –proceed directly to point 3
3. Position the bracket (2) and mark the holes to drill on the mounting surface
4. Drill the holes on the wall and insert expanders of suitable type and size (expanders NOT included in the packaging)
5. Insert the supply cable (3) into the bracket.

CAUTION: use only a flexible double insulation sheath (type HAR). The outer cable diameter must be less than 9mm and the thickness of the inner electrical wires must range between 1 and 2.5mm

6. Unsheathe the supply cable (3), by leaving out each wire of 3cm and connect them to the lamp holders' terminal (4).
7. Connect the lamp holder (4) to the bracket (2) by tightening the screws (5).
8. Place the bracket (2) on the mounting surface and tighten the screws (6). (NOT included in the packaging)
9. Install the lamp (NOT included in the packaging), place the diffuser (1) on the bracket (2) and turn it clock-wise until it stops.

