



Use and maintenance instructions

Tower/Wall


Outdoor luminaire for general use.

TECHNICAL DETAILS: refer to the product label

 The UE declaration of conformity can be downloaded from our website www.marecoluce.it

 Insulation Class II


IP44 Protection degree against dust ingress, solid particles, moisture

 This product must not be disposed as a normal household waste

WARNINGS:

- THE SAFETY OF THIS PRODUCT IS GUARANTEED ONLY WITH THE RESPECT OF THE EXISTING RULES FOR THE ELECTRICAL SYSTEMS, AND WITH THE APPROPRIATE USE OF THESE INSTALLATION INSTRUCTIONS, THEREFORE IT IS NECESSARY TO KEEP THEM.
- THE IMPROPER USE OF THIS PRODUCT IS FORBIDDEN; ANY TAMPERING WITH THE PRODUCT OR MODIFICATION OF THE PRODUCT THAT IS NOT AUTHORIZED BY MARECO LUCE CAN CAUSE DAMAGE TO PEOPLE, ANIMALS OR THINGS, AND WILL VOID ANY WARRANTY OR LIABILITY.
- SWITCH OFF THE ELECTRICITY BEFORE CONDUCTING ANY KIND OF MAINTENANCE.
- INSTALLARE IL PRODOTTO SU SUPERFICIE DRENANTE.
- THE PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH BEST PRACTICE.
- DAMAGED COMPONENTS MUST BE REPLACED WITH MARECOLUCE ORIGINAL SPARE PARTS.
- DO NOT PLACE ANY OBJECT ON THE DIFFUSER AND DO NOT COVER IT.
- MAX. LAMP SIZE (IN MM):

- o FBT 8W E27 D70 L110
- o FBT 15W E27 D70 L160
- o FBT 21W E27 D85 L180

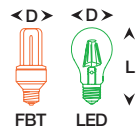

GENERAL MAINTENANCE RECOMMENDATIONS:

- THE BODY AND THE OTHER PARTS OF THE PRODUCT CANNOT BE COVERED BY SOIL OR PUT IN CONTACT WITH AGGRESSIVE CHEMICAL SUBSTANCES (HERBICIDES, FERTILIZINGS, ETC).
- CLEAN THE FITTING PERIODICALLY TO REMOVE POSSIBLE DIRT/GROUND DEPOSITS
- DO NOT USE HARSH DETERGENTS TO CLEAN THE DIFFUSER
- CHECK THE TIGHTNESS OF THE SCREW SECURING THE FITTING.
- CHECK THE INTEGRITY OF THE FITTING COMPONENTS: REPLACE THEM IN CASE OF DAMAGE BY USING ONLY ORIGINAL MARECO LUCE PARTS
- CHECK THE PLASTIC CASINGS CAREFULLY IN ORDER TO IDENTIFY ANY POSSIBLE INSULATION DAMAGE.

1. Remove the diffuser (1), by turning it 60° anti clock-wise.
2. Unsheathe the supply cable (2) by stripping each wire of approx. 4cm.

CAUTION: use only a flexible double insulation sheath (type HAR). The outer cable diameter must be lower than 11mm and the thickness of the inner electrical wires must range between 1 and 2,5 mmq.

3. Insert the supply cable (2) into the support base (3) by introducing the wires from the side into the centre of the base and by blocking them in the relevant eyelets of the cord block (4).
 4. Connect the wires to the lamp's terminals (5).
 5. Secure the lamp holder (5) and the cord block (4) to the support base (3) and tighten the screws (6).
 6. Place the support base (3) to the mounting surface by using the expansion caps (NOT included with the luminaire);
- CAUTION:** the product must be installed on an absorbing surface.
7. Install the lamp (NOT included), place the diffuser (1) on the support base (3) and turn it 60° clock-wise.

