


Use and maintenance instructions

Boled applique

Fixed bollard for outdoor use, to be installed on wall

TECHNICAL DETAILS: refer to the product label

 The UE declaration of conformity can be downloaded from our website www.marecoluce.it

IP44 Protection degree against dust ingress, solid particles, moisture

 This product must not be disposed as a normal household waste

 Caution, risk of electrical shock. The lighting source of this luminaire must be replaced by the Manufacturer only

WARNINGS.

- THE SAFETY OF THIS PRODUCT IS GUARANTEED ONLY WITH THE RESPECT OF THE EXISTING RULES FOR THE ELECTRICAL SYSTEMS, AND WITH THE APPROPRIATE USE OF THESE INSTALLATION INSTRUCTIONS, THEREFORE IT IS NECESSARY TO KEEP THEM.
- THE IMPROPER USE OF THIS PRODUCT IS FORBIDDEN; ANY TAMPERING WITH THE PRODUCT OR MODIFICATION OF THE PRODUCT THAT IS NOT AUTHORIZED BY MARECO LUCE CAN CAUSE DAMAGE TO PEOPLE, ANIMALS OR THINGS, AND WILL VOID ANY WARRANTY OR LIABILITY.
- SWITCH OFF THE ELECTRICITY BEFORE CONDUCTING ANY KIND OF MAINTENANCE.
- THE PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH BEST PRACTICE.
- DAMAGED COMPONENTS MUST BE REPLACED BEFORE PUTTING THE PRODUCT BACK INTO SERVICE WITH MARECOLUCE SPARE PARTS.
- DO NOT REST OBJECTS ON THE DIFFUSER, DO NOT COVER OR OBSCURE IN ANY WAY.
- THE LIGHTING SOURCE OF THIS LUMINAIRE MUST BE REPLACED BY THE MANUFACTURER ONLY.

GENERAL MAINTENANCE RECOMMENDATIONS:

- CLEAN THE FITTING PERIODICALLY TO REMOVE POSSIBLE DIRT/GROUND DEPOSITS.
- DO NOT USE HARSH DETERGENTS TO CLEAN THE DIFFUSER.
- CHECK THE TIGHTNESS OF THE SCREW SECURING THE FITTING.
- CHECK THE INTEGRITY OF THE FITTING COMPONTS: REPLACE THEM IN CASE OF DAMAGE BY USING ONLY ORIGINAL MARECO LUCE PARTS.
- CHECK THE PLASTIC CASINGS CAREFULLY IN ORDER TO IDENTIFY ANY POSSIBLE INSULATION DAMAGE.

INSTALLATION INSTRUCTIONS:

1. Unscrew the screws (3) and remove the bracket (6) from the housing (1).
 2. Insert the power supply cable (2), in the central hole of the bracket (6) and fix the bracket to the wall by using some screws and expansion caps (not included).
- PAY ATTENTION:** Choose screws and expansion caps suitable for the type of installation that you are conducting.
3. Position the housing (1) on the interlocking of the bracket (6) and connect the power supply cable (2).
 4. Untighten the ferrule (5) of the tinned terminal block (see Pict 1 and 2).
 5. Insert the supply cable (2) in the ferrule (5). If needed, untighten the ferrule (4) and insert the supply cable also into the gasket (8) and then within the ferrule (5). (see Pict.1).
- Connect the supply cable by respecting the polarities and the cable sheathing (see Pict.2)
6. Close the terminal block by tightening the ferrule first (5) and then close the other ferrule (4) to make a watertight connection and ensure the declare IP rate, apply 1 Nm.

PAY ATTENTION: use only a flexible double insulation sheath (type HAR) or one suitable for outdoor use. The outer cable diameter must range between 7 and 12 mm. If a cable with diameter higher than 9mm is used, remove the inner gasket (8). The thickness of the inner electrical wires must range between 0,5 and 1,5 mmq.

7. Tighten the screw (7) paying attention to secure the eyelet of the earthing cable (9) to the bracket (6); do not remove the earthing cable that is secured to the housing (1) and to the wiring plate.
8. Remove the housing (1) from the interlocking, position it on the bracket (6) and secure it by tightening the screws (3).

