


AVVERTENZE:

- * IL PRODOTTO VA INSTALLATO DA PERSONALE SPECIALIZZATO
- * LA SICUREZZA DELL' APPARECCHIO È GARANTITA SOLO CON L'USO APPROPRIATO DELLE SEGUENTI ISTRUZIONI, PERTANTO È NECESSARIO CONSERVARLE.
- * TOGLIERE LA TENSIONE PRIMA DI EFFETTUARE QUALSIASI TIPO DI MANUTENZIONE.
- * NELLA VERSIONE FBT, LE DIMENSIONI MASSIME DELLA LAMPADA DEVONO ESSERE Ø58 L 160 MM
- * NON PULIRE LO SCHERMO CON DETERGENTI AGGRESSIVI.

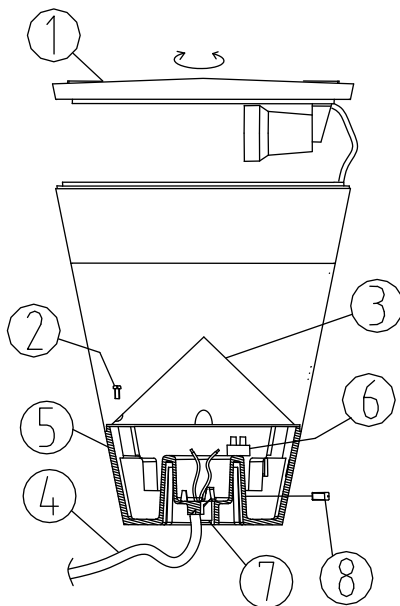


ISTRUZIONI PER L'INSTALLAZIONE:

1. Rimuovere il cappello (1) ruotandolo in senso antiorario.
2. Svitare la vite (2) e rimuovere il cono deflettore (3).
3. Inserire il cavo di alimentazione (4) attraverso la base dell'apparecchio (5).
4. Collegare i singoli cavi al morsetto (6).
5. Serrare il bloccacavo (7) presente sul fondo della base (5).
6. Posizionare il cono deflettore (3) e serrare la vite (2).
7. Inserire la lampada (non fornita in dotazione)
8. Chiudere il cappello (1) ruotandolo in senso orario.
9. Fissare l'apparecchio testapalo serrando il grano (8) presente sulla base (diametro esterno palo max 60mm)

WARNINGS:

- * THE FITTING MUST BE INSTALLED BY A PROFESSIONAL INSTALLER.
- * THE SAFETY OF THIS PRODUCT IS GUARANTEED ONLY WITH THE APPROPRIATE USE OF THE ASSEMBLY INSTRUCTIONS WHICH MUST BE RETAINED.
- * SWITCH OFF THE ELECTRICITY BEFORE CONDUCTING ANY KIND OF MAINTENANCE.
- * THE VERSIONS PRE-SET FOR FBT LAMP CAN BE EQUIPPED WITH LAMPS OF MAX. DIMENSION Ø58 L 160 MM .
- * DO NOT USE HARSH CHEMICAL DETERGENTS FOR CLEANING DIFFUSER.

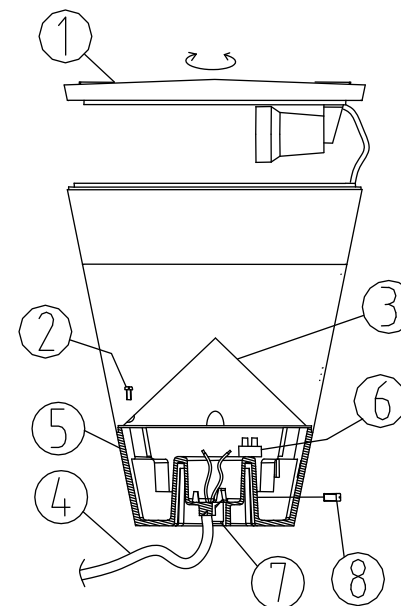

ASSEMBLY INSTRUCTIONS:

1. Remove the upper part (1) by turning it anti-clockwise.
2. Untighten the screw (2) and remove the reflecting cone (3).
3. Insert the feeding cable (4) through the base of the fitting (5).
4. Connect the single cables to the terminal (6).
5. Tighten the cord-block (7) placed on the bottom of the base (5).
6. Position the reflecting cone (3) and tighten the screw (2).
7. Insert the lamp (not included).
8. Close the upper part (1) by turning it clockwise.
9. Fix the fitting to the pole by tightening the dowel (8) placed on the base (the outer diameter of the pole must be max 60mm)