


AVVERTENZE:

- * L'INSTALLAZIONE E LA MANUTENZIONE DELL'APPARECCHIO DEVONO ESSERE EFFETTUATE DA PERSONALE SPECIALIZZATO.
- * LA SICUREZZA DELL' APPARECCHIO È GARANTITA SOLO CON L'USO APPROPRIATO DELLE SEGUENTI ISTRUZIONI, PERTANTO È NECESSARIO CONSERVARLE.
- * TOGLIERE LA TENSIONE PRIMA DI EFFETTUARE QUALSIASI TIPO DI MANUTENZIONE.

IP65   

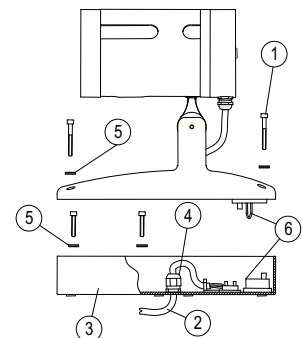

ISTRUZIONI DI MONTAGGIO VERSIONI CON VANO CABLAGGIO:

1. Svitare le viti (1).
2. Inserire il cavo di alimentazione (2) nel vano cablaggio (3) attraverso il pressacavo (4).
3. Collegare il cavo di alimentazione (2) al morsetto rispettando le polarità, avendo cura di collegare il cavo di terra.
4. Serrare il pressacavo (4).
5. Fissare il vano cablaggio (3) alla superficie desiderata mediante viti e tappi ad espansione (non forniti in dotazione). In caso di installazione a palo usare viti M6 (non fornite in dotazione). In entrambi i casi inserire le rondelle (5) sottovite.
6. Chiudere l'apparecchio e serrare le viti (1) inserendo le rondelle sottovite (5).


ATTENZIONE: assicurare l'innesto del sezionatore (6) durante la chiusura dell'apparecchio.

ISTRUZIONI DI MONTAGGIO VERSIONI SENZA VANO CABLAGGIO:

1. Collegare l'apparecchio (1) ad un alimentatore appropriato.
2. Fissare l'apparecchio (1) alla superficie desiderata mediante viti e tappi ad espansione (2) (non forniti in dotazione). Inserire le rondelle sottovite (3) (fornite in dotazione).

REGOLAZIONE DELL'OTTICA


1. Rimuovere il tappo a vite di copertura per raggiungere il dado di regolazione.
2. Ruotare il dado esagonale in senso antiorario per stringere il fascio. Ruotarlo in senso orario per allargarlo. Min 20° - Max 60°.
3. Avvitare il tappo di copertura facendo attenzione alla corretta posizione della guarnizione per garantire il grado IP dichiarato.

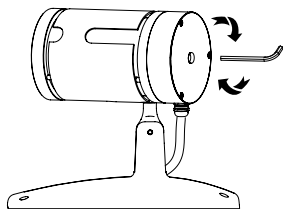

WARNINGS:

- * THE FITTING MUST BE INSTALLED BY A PROFESSIONAL INSTALLER.
- * THE SAFETY OF THIS PRODUCT IS GUARANTEED ONLY WITH THE APPROPRIATE USE OF INSTALLATION INSTRUCTIONS WHICH MUST BE PRESERVED.
- * SWITCH OFF THE ELECTRICITY BEFORE MAKING ANY MAINTENANCE.

IP65   

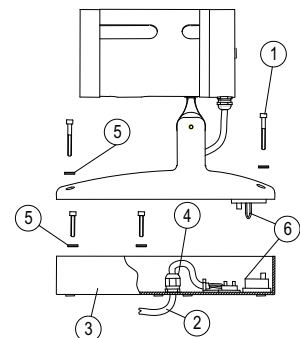

ISTRUZIONI DI MONTAGGIO VERSIONI CON VANO CABLAGGIO:

1. Untighten the screws (1).
2. Insert the feeding cable (2) into the wiring space (3) through the cable gland (4).
3. Connect the feeding cable (2) to the clamp paying attention to respect the polarities and to connect the earthing cable.
4. Tighten the cable gland (4).
5. Fix the wiring space (3) to the selected surface through the screws and the expansion caps (not included). For the installation on pole, it is necessary to use M6 screws (not included). In both cases insert the under-screw washers (5).
6. Close the fitting and tighten the screws (1) by inserting the under-screw washers (5).

PAY ATTENTION: the disconnecting switch must be plugged in (6) while you close the fitting.

INSTALLATION INSTRUCTIONS WITHOUT GEAR ROOM VERSIONS:

1. Connect the fitting (1) to a suitable ballast, where necessary.
2. Fix the fitting (1) to the selected surface through the screws and the expansion caps (2) (not included). Insert the under-screw washers (3) (included).

TO ADJUST THE OPTICS

1. Remove the screw-cap in order to reach the adjustment nut.
2. Rotate the hexagonal nut anti-clockwise to narrow the beam. Rotate clockwise to widen the beam. Min 20° - Max 60°.
3. Tighten the covering cap ensuring that the gasket is in the correct position so as to guarantee the declared IP protection rate.

